


EN Instructions for use of Solight WO804-B light panel

Dear customer, thank you for purchasing our product. Please read the following instructions carefully and follow them to serve you safely and to your full satisfaction. This will prevent misuse or damage. Avoid unprofessional handling of this appliance and always observe the electrical appliance usage guidelines. Do not hang or cover the luminaire with anything. Keep the instruction manual carefully. Installation may only be carried out by a qualified worker qualified in accordance with Decree No 50/1978 Coll., as amended, at least a worker who is knowledgeable in accordance with § 5 of Decree No 50/1978 Coll., as amended.

TECHNICAL PARAMETERS / TECHNICAL SPECIFICATIONS

Operating voltage	220-240V AC
Consumption	48W
Dimensions	400 x 55 mm
IP coverage	IP20
Illumination angle	120°
Chromaticity temperature	3000K/4000K/6000K

PACKAGING CONTENT

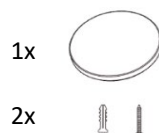

INSTALLATION

Disconnect the power supply before installation.

1. Insert the dowels into the pre-drilled holes.
2. Thread the power cable through the holder and screw the holder in place.
3. Thread the power cable through the hole in the luminaire.
4. Screw the luminaire to the bracket.
5. Connect the power cord to the terminal block and make sure the wiring is correct.
6. Attach the front cover.
7. Switch on the power supply.

Note: Use caution when removing the front cover. Press the cover down on one side and lift it up on the other side to remove. You can use a blunt object such as a knife.

The light source of this luminaire is non-replaceable, at the end of its service life the entire luminaire must be replaced and disposed of in a designated place. This product contains a light source that for design reasons cannot be removed for verification and therefore the entire product is considered a light source. The power cord cannot be replaced if damaged, the unit must no longer be used.

The manufacturer is not liable for any damage caused by improper use.

