


Thermal Imager


NF-524

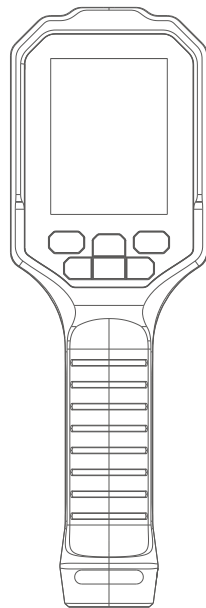

Overview

The NF-524 infrared thermal imager adopts the display method of infrared thermal imaging, which can measure the temperature of each pixel of the target object and capture the state of the object more clearly.

Keys and Functional Description

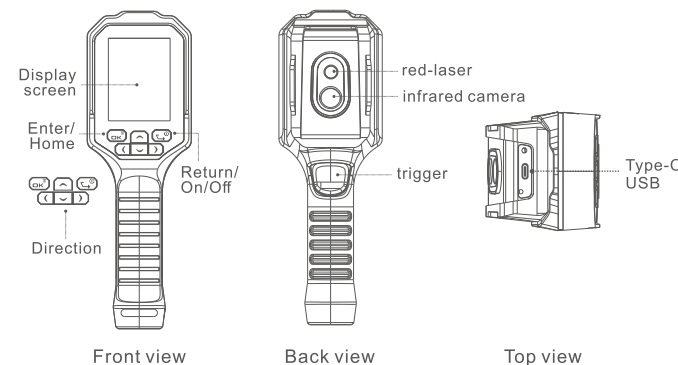

- ① Charging indication: USB Type-C interface is used for charging. During charging, the display screen is normally on and display the current power volume.
- ② On/Off: Short press “” to power on or long press “” to power off.
- ③ Photographing and video recording: Short press “Trigger” in power-on state to photograph, or long press “Trigger” to record videos.
- ④ Data transmission: When connecting with a computer through the USB Type-C wire, the thermal imager can generate the USB drive and copy photos/videos through the Windows system.

Functional Description

1. On/Off

Short press “” in power-off state to power on or long press “” in power-on state to power off.


2. Main interface

Press “” and “” on this interface to switch the palette, or press “” and “” to switch the function of visible light imaging or infrared imaging.

Short press “Trigger” to photograph or long press “Trigger” to record videos.

Press “” on this interface to light off the screen and save power or press any keys to light on the screen again and enter the interface.

Press “” to display the following menu interface:

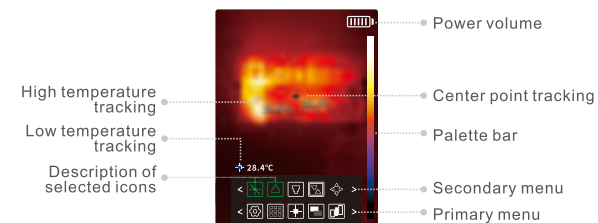


After the primary menu pops up, select a function with “” and “”, press “” to pop up the secondary menu. Press “” to return to the main interface.


After entering the secondary menu, select a function with “” and “”, press “” to confirm the selected function, and press “” to return to the primary menu. Both photographing and video recording are valid on this interface.

3. Photographing and video recording

Short press “Trigger” to photograph (image format: jpg).
Long press “Trigger” to record videos (video format: mp4).

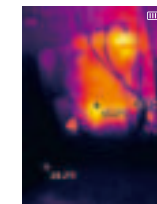

Photographing

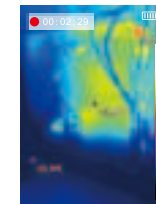

Video recording

4. Album

Press “” on the main interface to pop up the primary menu, select the album “” with “” and “”, press “” to enter the album.

All the pictures and videos in the album are arranged in the shooting time. Select the pictures or videos with “” and “”, press “” for full-screen display or play.


Press “” and “” in the display or play state to switch the previous or next file. After play or pressing “”, return to the album list interface.

5. System settings

Option	Description of system settings
Language switch	Chinese (Simplified), Chinese (Traditional), English, French, German, Spanish, Russian, Dutch, Japanese, Korean and Arabian
Emissivity	0.01-0.99
Unit switch	Degree centigrade, Fahrenheit and Kelvin
Temperature alarm (On/Off) setting	Select the upper/lower limit alarm or set the alarm value
Storage settings	View the internal storage situation and formatting
Date and time	Time setting: Year/month/day/hour
Auto OFF	Set the auto OFF time if there is no operation for a long time
Palette bar display switch	Whether the screen palette bar is displayed
Screen brightness	Screen brightness (adjustable)
Factory reset	Whether to reset the factory data (optional)

6. Palette

To optimize different scenarios and facilitate observing different target objects, the thermal imager comprises 8 common palettes.

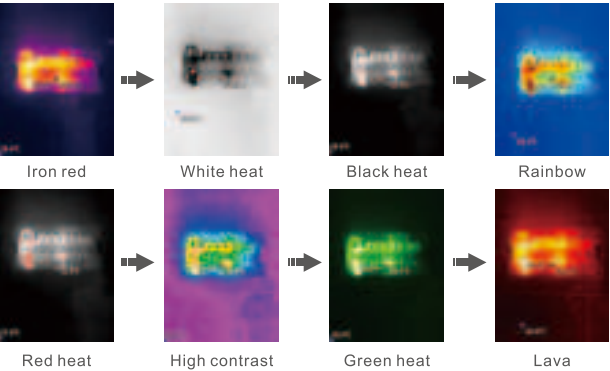

7. Temperature measurement mode

① Conventional temperature measurement

Support temperature measurement at the center point as well as continuous high/low temperature tracking

② Regional temperature measurement

Choose some regions for center point and high/low temperature tracking and test, or zoom in/out the temperature measurement region for different scenarios.

8. Laser

Pressing "  " on the main screen will bring up a primary menu. Selecting "  " "  " will access the submenu where you can choose the Laser "  " function. Press "  " to activate it. Once activated, press "  " again to deactivate the laser.

Technical parameters of product

Technical parameter description of NF-524		
Handheld thermal imaging	Resolution	120°90
	Working band	8~14um
	Frame rate	25Hz
	NETD	<60mK@25℃
	Field angle	H=38° V=50°
	Emissivity	0.01~0.99
	Temperature measurementrange	Low temperature: -10 to 160℃ High temperature: 160-400℃
	Temperature measurement accuracy	±2℃ or ±2% of the reading
	Screen size	2.8 inches
	Palette	Iron red, white heat, black heat, rainbow, red heat, high contrast, green heat and lava
General	Temperature measurement	Support full-screen temperature measurement of highest/lowest/center point and mild region
	Laser level	Class II
	Language	Chinese (Simplified), Chinese (Traditional), English, French, German, Spanish, Russian, Dutch, Japanese, Korean and Arabian
	Interface	USB Type-C (support charging and data transmission)
	Battery	2600mAh lithium battery
	Capacity	8G internal memory
	Picture storage format	JPG
	Video format	MP4
	Working time	4 hours if the battery is fully charged
	Working temperature	-10~50℃
	Storage uretemperat	-40~85℃
	Net weight	300g
	Product dimension	219 x 72 x 66mm

Packing list

Handheld Thermal Imager	1 set	Manual	1 copy
Qualification certificate/ warranty card	1 copy	Color box	1 pcs
Instructions card of lithium battery	1 copy	USB Type-C data line	1 pcs

Remarks: The package accessories shall be subject to the received material object.

精明鼠

深圳市诺方舟电子有限公司

编号	201	202	301	302	303	304	305	比例：	1:1	品号：	304-K4801-0002
类目	塑胶件	五金类	镜片	PVC贴纸	不干胶贴	说明书	包装盒	单位：	mm		
选择						√		设计	CZG	品名：	NF-524说明书折页英文-V1 20240329
306	307	308	309	310	311	312	313	核准			
彩卡	吸塑	工具包	PE袋	纸箱	宣传单	合格证	打印标签	标准：	√	文件类型：	做货文件 (较打样文件,更新了参数信息)
								定制：			
制作日期		2024.03.29		样式	4折页		印刷材质		128g双铜纸		
印刷要求		彩色		页码	变更记录						
尺寸大小		420*140mm		版本							